Active current probe 1mA/V & 10mA/V

User manual

 


Typical Application:

The active current probe is a low cost measurement equipment which can be used together with an oscilloscope for precise low current profile measurements up to 100mA. It can be used for research & development of electronic and embedded software systems.

Power supply:





Measurement range selection:



- Two measurement ranges can be selected with the appropriate switch:
 - 10mA/V → Maximum measurable current 100mA
 - 1mA/V → Maximum measurable current 10mA

The resolution depends on the measurement device on which the probe is connected. The probe is an analog amplifier.

Bandwidth limitation:



With the bandwidth limiter switch a bandwidthlimitation can be turned on or off. If the limitation is on, the cut off frequency is at 22.5kHz. It is a 1st order filter. If the limitation is off, the cut off frequency depends on the selected measurement range:

- 1mA/V: typical.: 200kHz
- 10mA/V: typical.: 2MHz



Sensor clips:



- The sensor clip cable contains three clips:
 - with the black clip
 - cable into the active current probe
 - device into DUT through this cable.


Use only the provided sensor clip cable by LabDevice!

Signal output:



The signal output delivers the measured and processed current which is represented by a voltage value (i.e. 1mA per V). The output can be connected with an SMA cable to a voltage measurement device (high impedance input), typically an oscilloscope.

Typical setup:

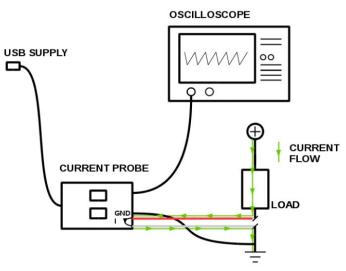

Warranty and disclaimer:

LabDevice offers a two-year warranty from the date of purchase. This warranty does not cover damages from misuse, contamination, alteration, accident or abnormal operation condition or handling, including failures which are caused by using the product out of specification of the datasheet or normal wear and tear of mechanical components.

If the product is damaged, please contact info@labdevice.com for further information.

LabDevice shall not be liable for any special, incidental, indirect or consequential damages or losses. This including loss of data, arising from any cause or theory. It is forbidden for authorized reseller to extend any different warranty on LabDevice behalf.

• GND: It is the reference of the measurement system. It is connected to the power supply GND and the signal output GND. It is the black wire

• IN: It is the red wire with the red clip. The current flows through this

• OUT: It is the white wire with the white clip. The current flows out the